

[3590 Home Page](#)

The 3590 Fibre Attached drive requires minimum code levels for IBM tape device drivers and drive microcode as listed in the table below:

For pSeries® (RS/6000®)

Component	Level	Website Location
AIX®		
IBM Tape Device Drivers		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/AIX/README
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/AIX/
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	DOIF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool
LINUX		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/Linux/SLES8/IBMTape_Magstar_pSeries.ReadMe
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/Linux/SLES8/
3590 E or H Drive Microcode		
- Minimum required level	DOIF_2B9	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool

For iSeries™ (AS/400®)

Component	Level	Website Location
IBM Tape Device Drivers	Included in OS/400 operating system	iSeries Technical Support Site link
3590 E Drive Microcode		
- Minimum required level	DOIE_32E	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	DOIF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool

For xSeries™ (NUMA-Q®)

Component	Level	Website Location
IBM Tape Device Drivers		Included with 3590 device accessory kit from NUMA-Q
3590 E Drive Microcode		
- Minimum required level	DOIE_32E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool

For SUN Attachment

Component	Level	Website Location
IBM Tape Device Drivers		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/Solaris/IBMtape.README
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/Solaris/
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	D0IF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool

For Intel™ Linux Attachment

Component	Level	Website Location
IBM Tape Device Drivers		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/Linux/README
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/Linux
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive		

Microcode		
- Minimum required level	D0IF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool

For Microsoft™ Windows™ Attachment

	Level	Website Location
Microsoft Windows NT™		
IBM Tape Device Drivers		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/Windows/WinNT/IBMMag.WinNT.Readme.txt
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/Windows/WinNT/
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	D0IF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool
Microsoft Windows 2000 Server		
IBM Tape Device Drivers		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/Windows/Win2000/IBMMag.Win2K.Readme.txt
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/Windows/Win2003/
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	D0IF_29C	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool
Microsoft Windows Server 2003		
IBM Tape Device Drivers		
- Readme		ftp://ftp.software.ibm.com/storage/devdrv/Windows/Win2003/IBMTape.W2K3.Readme.txt
- Downloads		ftp://ftp.software.ibm.com/storage/devdrv/Windows/Win2003/
3590 E and H Drive Microcode		
- Minimum required level	D0IF_2B9	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		http://knowledge.storage.ibm.com/HBA/HBASearchTool

Component	Level	Website Location
IBM Tape Device Drivers		
- Readme		<u>ftp://ftp.software.ibm.com/storage/devdvr/HPUX/11.0/PCI/README(HP/UX 11.0)</u> <u>ftp://ftp.software.ibm.com/storage/devdvr/HPUX/11i/PCI/README(HP/UX 11i)</u>
- Downloads		<u>ftp://ftp.software.ibm.com/storage/devdvr/HPUX/</u>
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	D0IF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		<u>http://knowledge.storage.ibm.com/HBA/HBASearchTool</u>

zSeries® Linux Attachment

Component	Level	Website Location
IBM Tape Device Drivers		
- Readme		<u>ftp://ftp.software.ibm.com/storage/devdvr/Linux/SLES8/IBMtape_Magstar_zSeries.ReadMe</u>
- Downloads		<u>ftp://ftp.software.ibm.com/storage/devdvr/Linux/SLES8/</u>
3590 E and H Drive Microcode		
- Minimum required level	DOIF_29C	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		<u>http://knowledge.storage.ibm.com/HBA/HBASearchTool</u>

Tru64 Attachment

Component	Level	Website Location
IBM Tape Device Drivers		
- Readme		<u>ftp://ftp.software.ibm.com/storage/devdvr/Tru64/README</u>
- Downloads		<u>ftp://ftp.software.ibm.com/storage/devdvr/Tru64/</u>
3590 E Drive Microcode		
- Minimum required level	DOIE_350	newest level ordered via 3590 Drive Feature Code 0500
3590 H Drive Microcode		
- Minimum required level	D0IF_26E	newest level ordered via 3590 Drive Feature Code 0500
Host Bus Adapter/SAN Support		<u>http://knowledge.storage.ibm.com/HBA/HBASearchTool</u>

2/10/2004