

**Proactive System Check Supported Product List as of February 2020**

Expansions - no PSC price as attached within base unit price

Tape drives - no PSC price as attached within base unit price

Racks - no PSC price, just for completeness (zero price)

	Machine Type	Model
<b>TotalStorage DS400</b>	1700	1RS
	1700	2RD
	1701	1RS
	1701	2RD
	1701	1RL
<b>DS400 Storage Expansion</b>	1710	10J
	1710	10U
	1710	10X
	1733	1RU
	1733	1RX
	1733	2RX
<b>TotalStorage DS3200</b>	1726	21E
	1726	21X
	1726	22B
	1726	22E
	1726	22T
	1726	22X
	1726	HC2
	1726	HC6
<b>TotalStorage DS3300</b>	1726	31E
	1726	31X
	1726	32X
	1726	32E
	1726	32T
	1726	HC3
	1726	HC7
<b>TotalStorage DS3400</b>	1726	41E
	1726	41S
	1726	41U
	1726	41X
	1726	42E
	1726	42S
	1726	42U
	1726	42T
	1726	42X
	1726	HC4
	1726	HC8
	1726	PAM
<b>System Storage DS3512 Express</b>	1746	A2D
	1746	A2S
	1746	A4D
	1746	A4S
	1746	C2A
	1746	C4A
	1746	C4T
	1746	E4T
	1746	T4D

<b>DS3K Storage Expansion</b>	1727	01E
	1727	01M
	1727	01X
	1727	02T
	1727	HC1
	1727	HC5
	1746	A2E
	1746	A4E
	1746	E2A
	1746	E4A
	1746	T4E

<b>TotalStorage DS4100</b>	1722	60J
	1722	60K
	1722	60L
	1722	60U
	1722	60X
	1722	6LJ
	1722	6LU
	1722	6LX
<b>TotalStorage DS4100</b>	1724	100
	1724	15C
<b>TotalStorage DS4500</b>	1742	1RU
	1742	1RX
	1742	90U
	1742	90X
<b>SYSTEM STORAGE EXP3800</b>	1813	80E
	1813	80H
<b>SYSTEM STORAGE DCS3860</b>	1813	86H
	1813	86C
	1813	96C
<b>System Storage DS5020 Express</b>	1814	20A
<b>System Storage DS4700 Express</b>	1814	70A
	1814	70H
	1814	70S
	1814	70T
	1814	72A
	1814	72H
	1814	72S
	1814	72T
<b>System Storage DS4200 Express</b>	1814	7VH
<b>System Storage DS3950 Express</b>	1814	92H
	1814	94H
	1814	98H
<b>Total Storage DS4800</b>	1815	80A
	1815	80H
	1815	82A
	1815	82H
	1815	84A
	1815	84H
	1815	88A
	1815	88H
<b>System Storage DS5100</b>	1818	51A

<b>System Storage DS5300</b>	1818	53A
<b>System Storage DS3700</b>	1818	80C
<b>System Storage DCS3700</b>	1818	90C
<b>DS3/4/5K Midrange Storage Expansion</b>	1710	10J
	1710	10U
	1710	10X
	1724	1XP
	1740	710
	1740	71J
	1740	1RU
	1740	1RX
	1747	HC1
	1747	HC2
	1812	81A
	1812	81H
	1812	81S
	1812	81T
	1812	8VH
	1814	52A
	1818	D1A
	1818	G1A
	1818	80E
	1818	RS1
	1818	RS2
	1818	RS3
<b>Midrange Storage Expansion for Lenovo</b>	6100	12X
	6100	24X
<b>Storwize V3700</b>	2072	12C
	2072	24C
	2072	2DC
	2072	L2C
	2072	S2C
	2072	T2C
<b>Storwize V5000</b>	2072	324
<b>Storwize V5000</b>	2072	212
<b>Storwize V5000</b>	2072	224
<b>Storwize V5000</b>	2072	312
<b>Storwize V5000</b>	2072	12F
<b>Storwize V5000</b>	2072	24F
<b>Storwize V5000</b>	2072	92F
<b>Storwize V5000</b>	2072	E12
<b>Storwize V5000</b>	2072	E24
<b>Storwize V5000</b>	2072	E92
<b>Storwize V5000</b>	2072	S12
<b>Storwize V5000</b>	2072	S24
<b>Storwize V5000</b>	2072	T12
<b>Storwize V5000</b>	2072	T24
<b>IBM FlashSystem 5000 LFF Expansion Enclosure</b>	2072	12G
<b>IBM FlashSystem 5000 SFF Expansion Enclosure</b>	2072	24G
<b>IBM FlashSystem 5010 LFF Control Enclosure</b>	2072	2H2
<b>IBM FlashSystem 5010 SFF Control Enclosure</b>	2072	2H4
<b>IBM FlashSystem 5030 LFF Control Enclosure</b>	2072	3H2
<b>IBM FlashSystem 5030 SFF Control Enclosure</b>	2072	3H4

<b>IBM FlashSystem 5000 High Density LFF Expansion Enclosure</b>	2072	92G
<b>IBM FlashSystem 7200 NVMe Control Enclosure</b>	2076	824
<b>IBM FlashSystem 7000 LFF Expansion Enclosure</b>	2076	12G
<b>IBM FlashSystem 7000 SFF Expansion Enclosure</b>	2076	24G
<b>IBM FlashSystem 7000 High Density LFF Expansion Enclosure</b>	2076	92G
<b>IBM Storwize V7000 Utility Model NVMe Control Enclosure</b>	2076	U7B
<b>IBM FlashSystem 7200 Utility NVMe Control Enclosure</b>	2076	U7C
<b>IBM FlashSystem 5100 LFF Expansion Enclosure</b>	2077	12G
<b>IBM FlashSystem 5100 SFF Expansion Enclosure</b>	2077	24G
<b>IBM FlashSystem 5100 NVMe Control Enclosure</b>	2077	4H4
<b>IBM FlashSystem 5100 High Density Expansion</b>	2077	92G
<b>IBM FlashSystem 5100 LFF Expansion Enclosure</b>	2078	12G
<b>IBM FlashSystem 5100 SFF Expansion Enclosure</b>	2078	24G
<b>IBM FlashSystem 5100 NVMe Control Enclosure</b>	2078	4H4
<b>IBM FlashSystem 5100 High Density Expansion</b>	2078	92G
<b>IBM FlashSystem 5100 Utility NVMe Control Enclosure</b>	2078	UHB
<b>IBM SAN Volume Controller Entry Storage Engine</b>	2145	SA2
<b>IBM SAN Volume Controller Storage Engine</b>	2145	SV2
<b>IBM SAN Volume Controller Entry Storage Engine</b>	2147	SA2
<b>IBM SAN Volume Controller Storage Engine</b>	2147	SV2
<b>Storwize V3700 for Lenovo</b>	6099	L2C
	6099	S2C
	6099	T2C
<b>Storwize V3700 - Expansion</b>	2072	12E
	2072	24E
	2072	2DE
	2072	LEU
	2072	SEU
	2072	TEU
<b>Storwize V3700 - Expansion for Lenovo</b>	6099	LEU
	6099	SEU
	6099	TEU
<b>Storwize V5000</b>	2077	12C
	2077	24C
	2077	112
	2077	124
	2077	212
	2077	224
	2077	312
	2077	324
	2077	AF3
	2077	12F
	2077	24F
	2077	AFF
	2078	112
	2078	124
	2078	212
	2078	224
	2078	312
	2078	324
2078	U5A	
2078	AF3	
2078	12F	

	2078	24F
	2078	AFF
	2078	24C
<b>Storwize V7000</b>	2076	112
	2076	124
	2076	312
	2076	324
	2076	524
	2076	624
	2076	724
	2076	U7A
	2076	U7B
	2076	AF6
	<b>Storwize V7000 Unified</b>	2073
2073		720
<b>Storwize V7000 - Expansion</b>	2076	212
	2076	224
	2076	12F
	2076	24F
	2076	AFF
	2076	92F
	2076	A9F
	4939	A29
	4939	H29
	4939	X29
<b>Storwize V5000 - Expansion</b>	2077	12E
	2077	24E
	2077	92F
	2077	A9F
	2078	12E
	2078	24E
	2078	92F
	2078	A9F
<b>Storwize V5100</b>	2077	AF4
	2077	424
	2078	424
	2078	AF4
	2078	U5B
	2078	U5A
<b>IBM Flex System V7000 storage node</b>	4939	A49
	4939	H49
	4939	X49
<b>DS8000</b>	2107	921
	2107	922
	2107	931
	2107	932
<b>DS8000 Software Expansion</b>	2396	LFA
	2397	LFA
	2398	LFA
	2399	LFA
<b>DS8100</b>	2421	931
	2422	931

		2423	931
		2424	931
	<b>DS8300</b>	2421	932
		2422	932
		2423	932
		2424	932
		2421	941
	<b>DS8700</b>	2422	941
		2423	941
		2424	941
		2421	951
	<b>DS8800</b>	2422	951
		2423	951
		2424	951
		2421	961
	<b>DS8870</b>	2421	AP1
		2422	961
		2423	961
		2424	961
		2831	980
	<b>DS8884</b>	2832	980
		2833	980
		2834	980
		2831	984
		2832	984
		2833	984
		2834	984
		5331	983
		5331	984
		5332	984
		5333	984
		5334	984
		2831	981
		2832	981
	2833	981	
	2834	981	
	2831	985	
	2832	985	
	2833	985	
	2834	985	
	2831	986	
	2832	986	
	2833	986	
	2834	986	
	5331	985	
	5332	985	
	5333	985	
	5334	985	
	5331	986	
	5332	986	
	5333	986	
	5334	986	
	2831	982	

<b>DS8888</b>	2832	982
	2833	982
	2834	982
	5331	988
	5332	988
	5333	988
	5334	988
	<b>IBM DS8900F</b>	5331
5331		994
5331		996
5331		E96
5332		E96
5333		E96
5334		E96
5332		983
5332		993
5332		994
5332		996
5333		983
5333		993
5333		994
5333		996
5334		983
5334		993
5334		994
5334	996	
<b>DS8000 Storage Expansion Unit</b>	5334	E96
	2107	92A
	2107	92E
	2107	94E
	2107	95E
	2107	96E
	2107	9A2
	2107	9AE
	2107	9B2
	2421	92E
	2421	94E
	2421	95E
	2421	96E
	2421	9AE
	2421	9B2
	2422	92E
	2422	94E
	2422	95E
	2422	96E
	2422	9AE
	2422	9B2
	2423	92E
	2423	94E
	2423	95E
2423	96E	
2423	9AE	
2423	9B2	

	2424	92E
	2424	94E
	2424	95E
	2424	96E
	2424	9AE
	2424	9B2
<b>DS8884 Storage Expansion Unit</b>	2831	98B
	2832	98B
	2833	98B
	2834	98B
	2831	84E
	2832	84E
	2833	84E
<b>DS8886 Storage Expansion Unit</b>	2834	84E
	2831	98E
	2832	98E
	2833	98E
	2834	98E
	2831	85E
	2832	85E
	2833	85E
	2834	85E
	2831	86E
	2832	86E
	2833	86E
	2834	86E
	<b>DS8888 Storage Expansion Unit</b>	5331
5332		85E
5333		85E
5334		85E
5331		86E
5332		86E
5333		86E
5334		86E
2831		98F
2832		98F
2833		98F
2834		98F
5331		88E
5332		88E
5333	88E	
5334	88E	
<b>XIV</b>	2810	A14
	2810	114
	2810	214
	2812	A14
	2812	114
	2812	214
	2810	314
	2812	314
	2810	116
2810	215	
2810	216	



	2812	116
	2812	215
	2812	216
<b>SAN16B-2</b>	2005	16B
<b>SAN32B-2</b>	2005	32B
<b>SAN16B-2</b>	2005	B16
<b>SAN32B-2</b>	2005	B32
<b>SAN32B-3</b>	2005	B5K
<b>SAN32B-3</b>	2005	5KB
<b>TotalStorage SAN Switch</b>	2005	H08
	2005	H16
<b>SAN04B-R</b>	2005	R04
<b>SAN18B-R</b>	2005	R18
<b>IBM BNT Rack Switch (PureFlex)</b>	1455	24E
	1455	48E
	1455	64C
	1611	16E
<b>SAN Data Gateway Router</b>	2108	G07
	2108	R03
	2108	S20
<b>SAN 2109</b>	2109	A16
	2109	F16
	2109	F32
	2109	S08
	2109	S16
	2109	C36
<b>TotalStorage Switch L10</b>	2006	L10
<b>TotalStorage m-type switch feature</b>	2026	12E
	2026	16E
	2026	224
	2026	32E
	2026	416
	2026	432
	2026	E12
	2027	232
	2027	R04
	2027	R16
	2031	016
	2031	032
	2031	216
	2031	224
	2031	232
	2031	E24
	2031	L00
	2032	001
	2034	212
	<b>Cisco MDS switch</b>	2053
2053		434
<b>Cisco MDS switch</b>	2061	020
	2061	420
<b>SAN24B-A Express</b>	2498	24E
	2498	24G

<b>SAN24B-4 EXPRESS</b>	2498	B24
	2498	F24
<b>SAN42B-R b-type</b>	2498	R42
<b>SAN06B-R</b>	2498	R06
<b>SAN24B-5</b>	2498	X24
<b>SAN24B-6</b>	8960	F24
<b>TotalStorage SAN b-type</b>	3534	F08
<b>SAN64B-2</b>	2005	B64
<b>SAN 2109</b>	2109	M12
	2109	M14
<b>SAN140M</b>	2032	064
	2032	140
<b>Cisco MDS switch</b>	2053	S34
	2054	D1A
	2054	D1H
	2054	E01
	2061	040
	2062	D01
	2062	D1A
	2062	D1H
	2062	T04
	9710	E01
	9711	S48
	9711	T32
	9711	S96
	<b>SAN32B-4</b>	2498
<b>SAN48C</b>	8977	R50
	8977	T32
	8977	T96
	8977	T48
<b>SAN40B-4</b>	2498	40E
	2498	B40
<b>SAN48B-4</b>	2498	F48
<b>SAN80B-4</b>	2498	B80
<b>SAN96B-4</b>	2498	F96
	2498	N96
<b>Storage Networking SAN64B6</b>	8960	F64
	8960	N64
<b>SAN 2109</b>	2109	M48
<b>SAN 2027</b>	2027	140
	2027	256
<b>Cisco MDS switch</b>	2054	E04
	2054	E07
	2054	E11
	9710	E08
	9710	E16
<b>Cisco MDS 9500 Family</b>	2062	D04
	2062	D07
	2062	E11
	2062	T07
<b>CAN201B</b>	2499	192

<b>JAN504D</b>	2499	416
<b>SAN768</b>	2499	384
	2499	816
	8978	E04
	8978	E08
	8978	E16
<b>SAN256B 6</b>	8961	F04
<b>SAN512B 6</b>	8961	F08

<b>SAN Storage Expansion</b>	2145	12F
	2145	24F
	2145	92F
	2147	12F
	2147	24F
	2147	92F
<b>SAN Volume Controller Storage Engine</b>	2145	4F2
	2145	8A4
	2145	8F2
	2145	8F4
	2145	8G4
	2145	CF8
	2145	CG8
	2145	DH8
	2145	SV1
	2147	SV1

<b>System Storage TS2900</b>	3572	S3E
	3572	S3H
	3572	S3R
	3572	S4E
	3572	S4H
	3572	S4R
	3572	S5H
	3572	S5R
	3572	S63
	3572	S6H
	3572	S6R
	3572	S7H
	3572	S8H
	<b>System Storage TS3100 / TS3200</b>	3573
3573		4UL
3573		E42
3573		E44
3573		F3H
3573		F3S
3573		F4H
3573		F4S
3573		L2U
3573		L32
3573		L34
3573		L3H
3573		L3S
3573		L4H

	3573	L4S
	3573	L4U
	3573	S32
	3573	S34
	3573	S42
	3573	S44
	3573	S4H
	3573	S4S
<b>System Storage TS3310</b>	3576	E9U
<b>System Storage TS3400</b>	3576	L5B
	3577	L5U
<b>3581 Ultrium Tape Autoloader</b>	3581	F28
	3581	F38
	3581	F3H
	3581	H13
	3581	H17
	3581	H23
	3581	L13
	3581	L17
	3581	L23
	3581	L28
	3581	L38
	3581	L3H
<b>3582 Ultrium Tape Library</b>	3582	L23
<b>System Storage TS3600</b>	3600	109
	3600	220
	3600	LXU
	3600	R20
<b>System Storage TS3607</b>	3607	16X
	3607	26X
<b>System Storage TS3623</b>	3623	2LX
	3623	2SX
<b>TS2900 Tape Autoloader for Lenovo</b>	6171	S4R
	6171	S5R
	6171	S6R
<b>System Storage TS3100 / TS3200 for Lenovo</b>	6173	2UL
	6173	4UL
<b>IBM Multimedia Backup Enclosure</b>	6190	1U3
	6190	1UX
<b>Ultrium Scalable Tape Library</b>	3583	L18
	3583	L36
	3583	L72
<b>System Storage TS3590 Tape Library</b>	3592	C06
	3592	C07
	3592	C20
	3592	E05
	3592	E06
	3592	E07
	3592	E08
	3592	EU6
	3592	EH7
	3592	EH8

<b>TS1155 TAPE DRIVE</b>	3592	55E
	3592	55F
	3592	55G
<b>IBM TS1160 Tape Drive</b>	3592	60E
	3592	60F
	3592	60G
<b>3592 Tape Cartridge Controller</b>	3592	C06
	3592	C07
<b>IBM TotalStorage 3952 Tape Frame Model F05</b>	3952	F05
<b>IBM TotalStorage 3953 Tape Frame Model F05</b>	3953	F05
<b>IBM TotalStorage 3952 Tape Frame Model F06</b>	3952	F06
<b>TotalStorage 3593 Library Manager</b>	3953	L05

<b>TotalStorage 3494 Tape Library</b>	3494	B10
	3494	B18
	3494	B20
	3494	CX0
	3494	CX1
	3494	L10
	3494	L12
	3494	L14
	3494	L22
<b>TS4300 Tape Library</b>	3555	E3A
	3555	L3A
<b>System Storage TS3584 Tape Library</b>	3584	D23
	3584	D25
	3584	D53
	3584	D55
	3584	HA1
	3584	L22
	3584	L23
	3584	L25
	3584	L32
	3584	L52
	3584	L53
	3584	L55
	3584	S25
	3584	S55
	3584	TR1
	3584	D23
	3584	D25
3584	D53	
3584	D55	
3584	HA1	
3584	S25	
3584	S55	
<b>System Storage TSXXX Tape Drive</b>	3588	F3A
	3588	F3B
	3588	F4A
	3588	F5A
	3588	F5C
	3588	F6A
	3588	F6C

<b>System Storage TS3590 Tape Library</b>	3588	F7A
	3588	F7C
	3588	F8A
	3588	F8C
	3588	F8S
	3590	B11
	3590	B1A
	3590	E11
	3590	E1A
	3590	H11
	3590	H1A
	3592	E08
	3592	EH8
	3592	J1A
3592	J70	
<b>TS7720/TS7740 Cache memories</b>	3956	CC6
	3956	CC7
	3956	CC8
	3956	CC9
	3956	CS7
	3956	CS8
	3956	CS9
	3956	CSA
	3956	CSB
	3956	CX6
	3956	CX7
	3956	CX9
	3956	XS7
	3956	XS9
	3956	XSA
	3956	XSB
<b>TS7740/TS7720/TS7700 Virtualization engine server</b>	3957	V06
	3957	V07
	3957	VEA
	3957	VEB
	3957	VEC
	3957	VED
<b>Tape Drives</b>	3490	AX0
	3490	A01
	3490	A02
	3490	A10
	3490	A20
	3490	B02
	3490	B04
	3490	B20
	3490	B40
	3490	C0S
	3490	C10
	3490	C11
	3490	C1A
	3490	C1S
	3490	C22
	3490	C2A

	3490	CS2
	3490	D31
	3490	D32
	3490	D41
	3490	D42
	3490	E01
	3490	E11
	3490	F00
	3490	F01
	3490	F11
	3490	F1A
	3490	FC0
	3580	H11
	3580	H13
	3580	H23
	3580	H4V
	3580	H5S
	3580	H6S
	3580	H7S
	3580	L11
	3580	L13
	3580	L23
	3580	L33
	3580	L3E
	3580	L3H
	3580	L43
	3580	L4X
	3580	S3E
	3580	S3V
	3580	S43
	3580	S4E
	3580	S4V
	3580	S53
	3580	S5E
	3580	S5X
	3580	S63
	3580	S6E
	3580	S6X
	6160	S4V
	6160	S5E
	6160	S6E
	6160	S6X
<b>FlashSystem 810</b>	9830	AE1
<b>FlashSystem 710</b>	9830	AS1
<b>FlashSystem 820</b>	9831	AE2
<b>FlashSystem 720</b>	9831	AS1
<b>FlashSystem 820 (1410 cluster solution)</b>	9832	XE1
<b>FlashSystem 820 (1410 cluster solution)</b>	9832	XE2
<b>FlashSystem 720 (1410 cluster solution)</b>	9832	XS1
<b>FlashSystem 720 (1410 cluster solution)</b>	9832	XS2
<b>IBM FlashSystem V840 Storage Control Enclosure</b>	9840	AE1
<b>IBM FlashSystem V9000 Storage Control Enclosure</b>	9840	AE2
<b>IBM FLASHSYSTEM 900</b>	9840	AE3

IBM FlashSystem V840 Storage Control Enclosure	9843	AE1
IBM FlashSystem V9000 Storage Control Enclosure	9843	AE2
IBM FLASHSYSTEM 900	9843	AE3
FLASH SYSTEMS - STORAGE	9843	UF3
IBM FlashSystem V840 Control Enclosure	9846	AC0
IBM FlashSystem V840 Control Enclosure	9846	AC1
FLASHSYS V9000 CONTR ENCLOSU	9846	AC2
FLASHSYSTEM CONTROL ENCLOSURE	9846	AC3
FLASHSYS V840 STORAGE ENCLOS	9846	AE1
IBM FlashSystem V9000 Storage Control Enclosure	9846	AE2
IBM FLASHSYSTEM V9000	9846	AE3
FLASHSYSTEM V9000 LFF EXPANS	9846	12F
V9000 SFF EXPANSION ENCLOSURE	9846	24F
V9000 HD EXPANSION ENCLOSURE	9846	92F
IBM FlashSystem V840 Control Enclosure	9848	AC0
IBM FlashSystem V840 Control Enclosure	9848	AC1
IBM FlashSystem V9000 Control Enclosure	9848	AC2
IBM FlashSystem V9000 Control Enclosure	9848	AC3
IBM FlashSystem V840 Storage Control Enclosure	9848	AE1
IBM FlashSystem V9000 Storage Control Enclosure	9848	AE2
IBM FLASHSYSTEM V9000	9848	AE3
IBM FlashSystem 9100 utility model	9848	UF7
IBM FlashSystem 9100 utility model	9848	UF8
FLASHSYSTEM V9000 LFF EXPANS	9848	12F
V9000 SFF EXPANSION ENCLOSURE	9848	24F
V9000 HD EXPANSION ENCLOSURE	9848	92F
IBM FlashSystem 9200 SFF NVMe Control Enclosure	9846	AG8
IBM FlashSystem	9848	AG8
IBM FlashSystem 9200 Utility Model SFF NVMe Control Enclosure	9848	UG8
IBM FLASHSYSTEM A9000R	9835	415
	9835	425
FLASHSYSTEM A9000	9836	415
	9836	425
IBM FLASHSYSTEM A9000R	9837	415
	9837	425
	9837	U25
FLASHSYSTEM A9000	9838	415
	9838	425
	9838	U25
Texas Memory Systems (TMS)	9833	AE1
	9833	AS1
	9833	AE2
	9833	AS1
	9834	AE2
	9834	AS2